

# INSTALLATION INSTRUCTIONS

## REAR SEAT

**REAR SEAT REMOVAL:** In most cases the rear seat will need to be removed from the vehicle for proper installation. Start by removing the seat cushion then remove the backrest. If you are not sure how to do this, get advice from your local dealer or Upholstery shop.

**INSTALL SEATCOVERS:** With the seats out of the vehicle, place the seat covers on the seat and secure in place using the strapping system provided. The straps can either hook / clip to each other or into the framework of the seat. If your vehicle has seatbelts that come through the seat you will need cut a hole in the seat cover large enough to feed the seat belt through.

**INSTALL SEATS:** In most cases you would install the backrest first then the seat cushion.

**SEATBELT ACCESS:** If your vehicle has seatbelts that come through the seat cushion, cut a hole large enough to feed the seat belt through seat cover

# INSTALLATION INSTRUCTIONS

## HEADREST / ARMRESTS

**INSTALL HEADRESTS:** Slide headrest cover on to headrest. Make a small notch in the Velcro for the headrest post(s) then secure Velcro.

**INSTALL ARMRESTS:** Slide armrest cover on to armrest and secure Velcro at the rear of the armrest. Some armrests open, in which case the armrest cover would be made in 2 pieces with a Velcro attachment at the rear of the armrest.

**SHEEPSKIN CARE:** Seat covers should be brushed and vacuumed periodically to ensure maximum longevity. Seat covers can be spot cleaned using a mild baby shampoo but if the whole seat cover needs cleaning, it is advisable to have them dry cleaned by a dry cleaner with experience in leather and fur products.

